 




IBM ThinkPad R40 Battery Replacement

Replace the battery in an IBM Thinkpad R40

 
Written By: Alec M

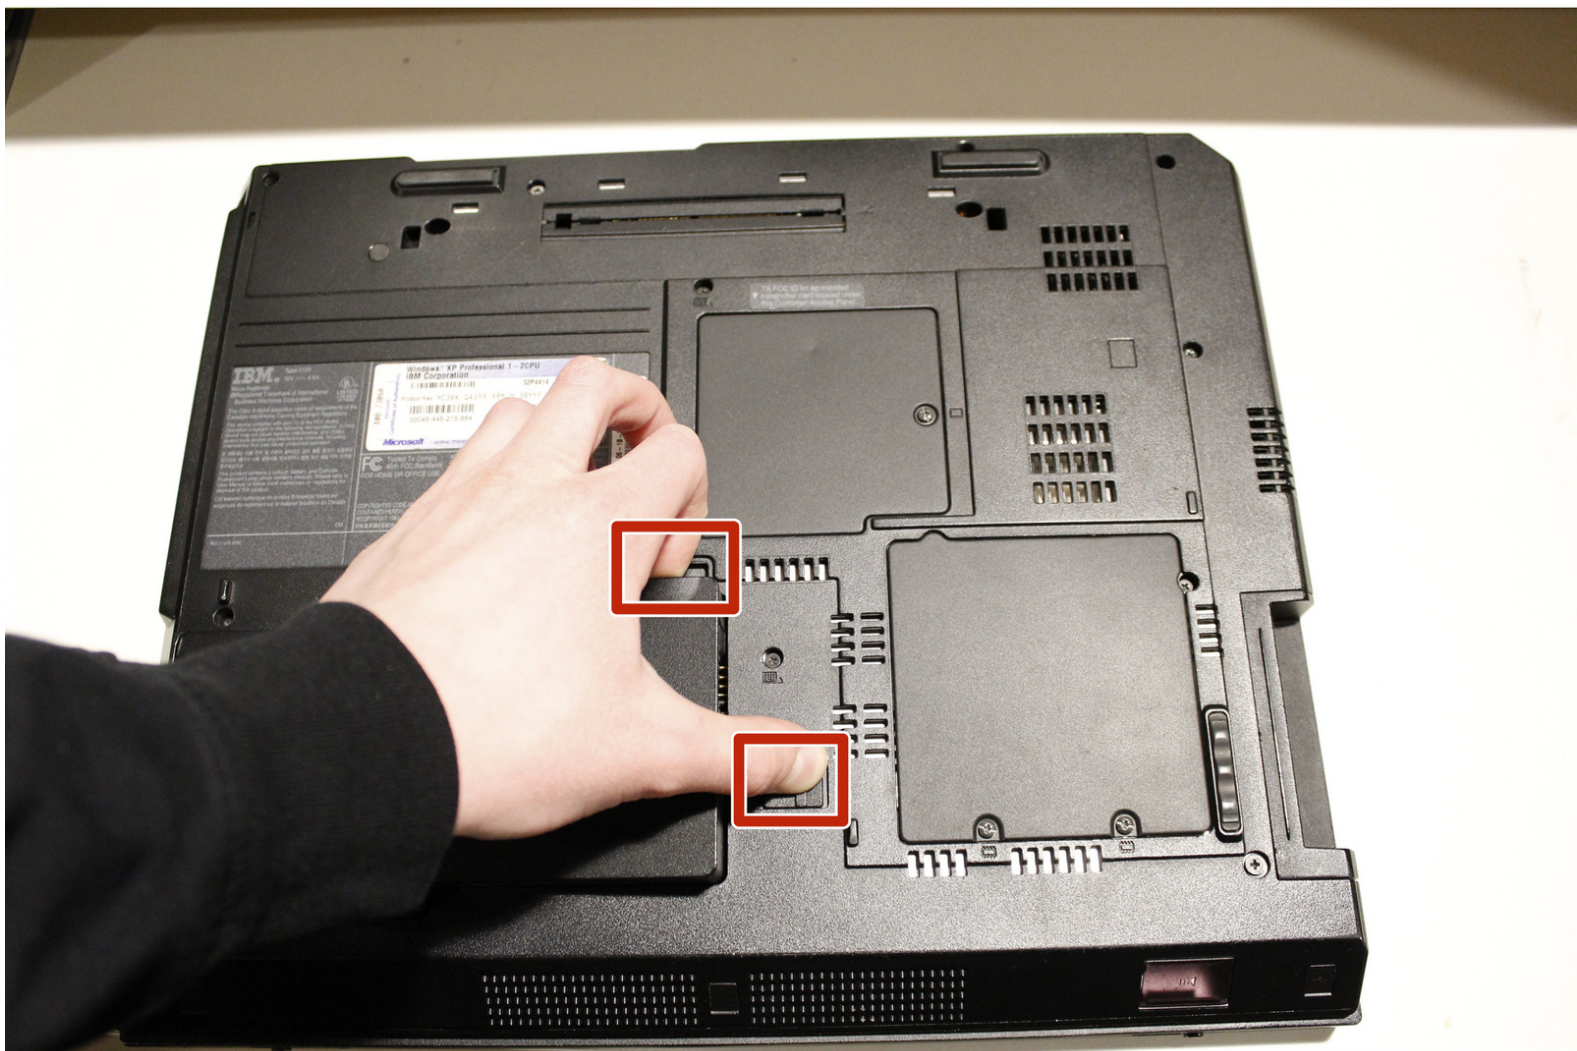

INTRODUCTION

Replace the battery in an IBM Thinkpad R40

Step 1 — Remove the battery

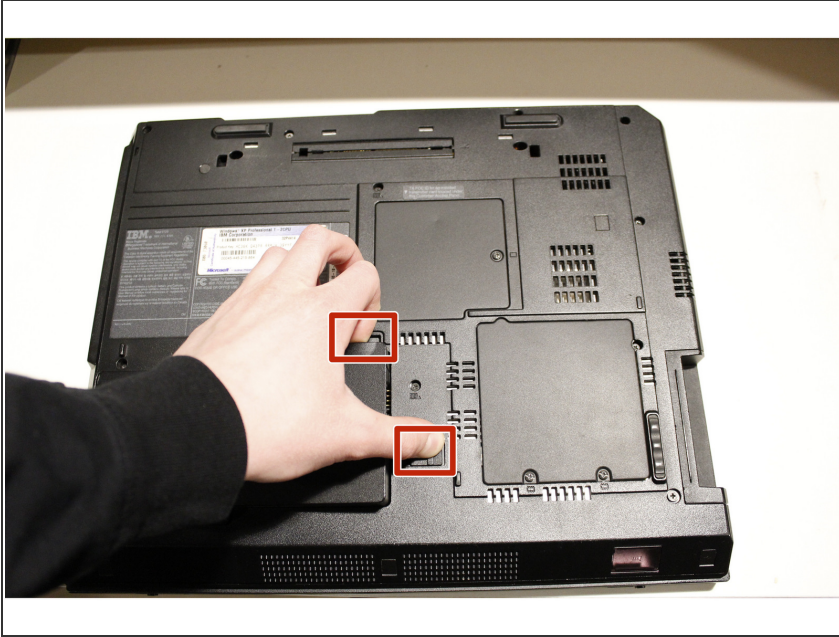

- To remove the battery, slide the battery lock lever right, while pulling on the battery tab.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 05:36:39 AM.